


# Aurora

## addendum

The panels will go on the base rail in the same fashion as shown in the *Panel-Built Installation Instructions* so please read those instructions first. When you are ready to place the panels on the base rail, please refer to this addendum for proper sequence.

**NOTE:** The Aurora Sauna does not have corner posts, fasten them to one another as shown on page #4 of the *Panel-Built Installation Instructions*. Follow the *Exterior Installation* section.

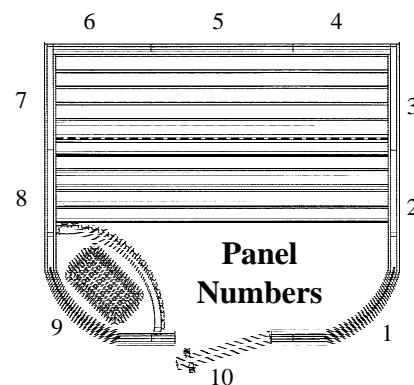

### Wall Panel Sequence

1. Place the front three panels (9, 10, and 1) on the base rail in that order.
2. Place the side panels (8, and 2) on the base rail.
3. Place the side panels (7, and 3) on the base rail.
4. Place the back wall panels (4, 5, and 6) on the base rail in that order.
5. Make sure they are fastened to one another properly as shown on page #4 of the *Panel-Built Installation Instructions*.



placing panel 9 on base rail



panel 9 positioned on base rail

### Top Plate Installation

6. See page #7 of the *Panel-Built Installation Instructions* and use the *Installation Alternative* to install the top plate.  
**NOTE:** You will have 2 curved sections of the top plate to go with the 2 curved wall panels.



inserting top plate

### Ceiling Panel Sequence

(See pages 7 and 8 of the *Panel-Built Installation Instructions*)

7. Place the left-side (as viewed from the front of sauna) ceiling panel into position.  
**NOTE:** Make sure the tongue and groove is towards the interior of the sauna room and the plywood sides of the ceiling panels are facing up.
8. Place the curved, center ceiling panel into position.
9. Place the right-side ceiling panel into position.



placing ceiling panel A into position



placing curved ceiling panel B into position

## Interior Ceiling Trim

- Put into position the cove molding for panel 6. Mark a vertical line on the molding exactly where the ceiling panel starts its upward curve and cut the molding to this length.
- Using the provided finishing nails, tack the molding into place. See page 8 of the *Panel-Built Installation Instructions*.
- Take one of the longest pieces of molding and put one end into the corner of panels 6 and 7 and flex the molding around the curved panel 9
- Making sure the molding is tight along the corners, mark it with a vertical line exactly where the ceiling panel starts its upward curve (as was done in step #10) and cut it to this length.
- Using finishing nails, tack it into place.
- Repeat steps 10-14 but on the opposite side of the sauna.
- Take the two pieces curved cove molding and put them into place along the curved, center ceiling panel at front and back of sauna.
- Mark them with a vertical line where they overlap the other pieces of molding you just installed and cut them to these lengths.
- Using finishing nails, tack the two curved pieces of cove molding into place.




marking cove molding



positioning cove molding




flexing the cove molding

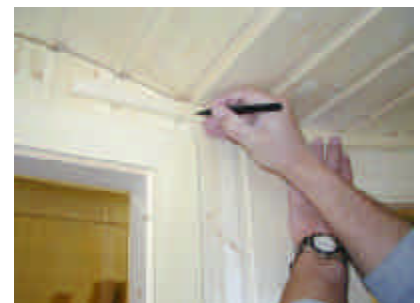

marking cove molding



curved cove molding

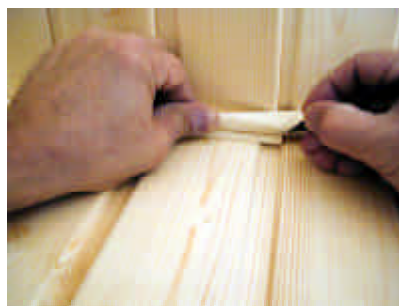

marking cove molding



finished cove molding